


# Xarmor U9

## Mechanical Keyboard

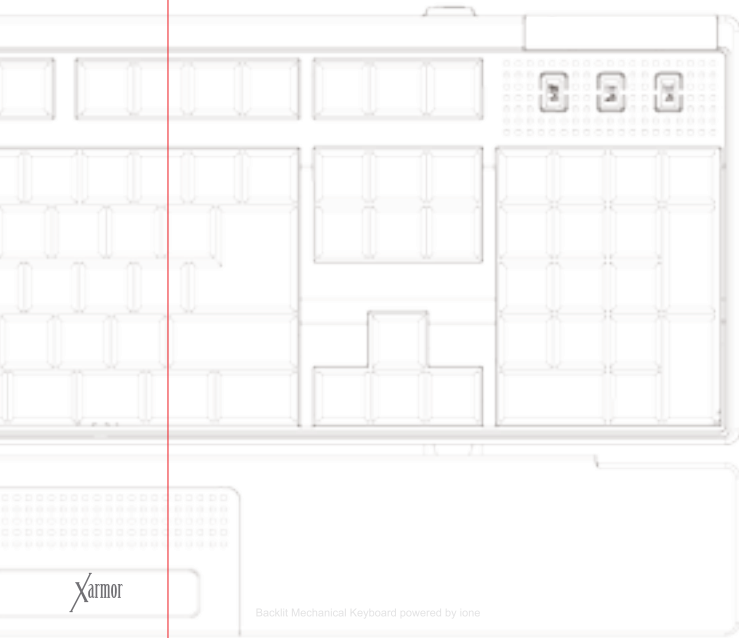

User's Guide



ENGLISH

### Xarmor U9 Mechanical Keyboard

Congratulations on purchasing your very own Xarmor U9 mechanical keyboard – a gaming keyboard engineered to suit the needs of every gamer. Featuring Cherry blue mechanical switches and it is the keyboard of choice for optimizing the gaming experience.

Xarmor U9 mechanical keyboard  
USB 1.1/2.0 compatible keyboard for Windows® XP / Vista / 7

#### Package Contents:

- Xarmor U9 mechanical Keyboard
- User guide
- (1) Wrist pad

#### System Requirements:


PC with built-in USB (1) or PS2

#### Installation / Technical support

Windows® XP / Vista / 7

#### USB Installation Instructions:

1. Plug your keyboard into the USB ports of your computer.



2. Windows® will automatically install all the necessary driver for the keyboard

#### PS/2 Installation Instructions:

1. Plug your keyboard into the PS/2 port of your computer.



2. Restart your computer.

1



ENGLISH

### Compound Media Keys ( F1~F6 ,Press with left "Shift" key)




1 Mute 2 Volume down 3 Volume up 4 Play/Pause 5 Previous track 6 Next track

#### Wrist Pad Installation:



Insert the wrist pad under the keyboard and align the wrist pad with the keyboard

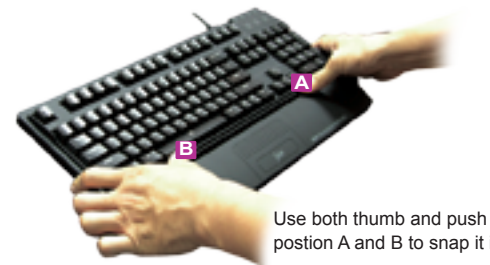

Use both thumb and push on position A and B to snap it in

2



ENGLISH

### Safety and Maintenance

#### SAFETY GUIDELINES:

In order to achieve maximum safety while using your Xarmor U9, we suggest that you adopt the following guidelines:

1. If you have trouble operating the keyboard properly and troubleshooting does not work, unplug the device and call our support team or visit [www.ione.com.tw](http://www.ione.com.tw) for support. Do not attempt to service or fix the device yourself at any time.
2. Do not take the keyboard apart (doing so will also void your warranty) and do not attempt to service it yourself or operate it under abnormal current loads.
3. Keep your keyboard away from liquid, humidity or moisture. Operate your keyboard only within the specified temperature range of 0°C (32°F) to 40°C (104°F). Should you operate it in a temperature that is beyond this range, unplug and switch off the device in order to let the temperature stabilize within the optimal temperature range.

#### COMFORT:

Research has shown that long periods of repetitive motion, improper positioning of your computer peripherals, incorrect body position, and poor habits may be associated with physical discomfort and injury to nerves, tendons, and muscles. Below are some guidelines to avoid injury and ensure optimum comfort while using your Xarmor U9.

1. Position your keyboard and monitor directly in front of you with your mouse next to it. Place your hands/arms next to your side, not too far away and with your mouse within easy reach.
2. Adjust the height of your chair and table so that your keyboard and mouse are at or below hands/arms height.
3. Keep your feet well supported, posture straight and your shoulders relaxed.
4. During gameplay, relax your wrist and keep it straight. If you do the same tasks with your hands repeatedly, try not to bend, extend or twist your hands for long periods.
5. Do not rest your wrists on hard surfaces for long periods.
6. Make sure your fingers are resting on the keyboard buttons comfortably.

3



ENGLISH

7. Do not sit in the same position all day. Get up, step away from your desk and do exercises to stretch your arms, shoulders, neck and legs.
8. If you should experience any physical discomfort while using your keyboard, such as pain, numbness, or tingling in your hands, wrists, elbows, shoulders, neck or back, please consult a qualified medical physician immediately.

#### MAINTENANCE AND USE:

There is a little regular maintenance required to keep the Xarmor U9 in optimum condition. Once a month, we recommend that you unplug the keyboard from the USB port and clean the keys on it with a soft cloth or cotton swab. Use a little warm water but avoid soap or harsh cleaning agents.

4

ione-Xarmor-U9 七國語言說明書

說明書料號:

發稿日期:2010.02.03